



**Palm Treo 800w**

**Carrier: Sprint**

**Software tested:** Build 15117 FW116

**How to find the software version:** On the Home screen press **Start → Settings → System-Tab → About → Version-Tab**

**Note:** **BMW makes no guarantees or warranties as to the performance of each phone while connected to your BMW via Bluetooth® Wireless Technology. Furthermore, software releases by BMW, the phone supplier or the wireless carrier dated after testing might alter compatibility results.**

**Vehicles compatible:**

1 Series  
3 Series  
5 Series  
6 Series  
7 Series  
7 Series  
X5  
X6  
Z4

**Produced after**


September 2005  
September 2005  
September 2005  
September 2005  
September 2005 to September 2008  
November 2008  
October 2005  
April 2008  
March 2009

**Pairing Instructions:**

1. Set vehicle in pairing mode. For details please see the vehicle user's manual.
2.
  - To turn Bluetooth on at handset: On the Home screen press Start → Settings → Connections-Tab → Bluetooth → Mode-Tab → Turn on Bluetooth → OK
  - To search for Bluetooth devices: On the Home screen press Start → Settings → Connections-Tab → Bluetooth → Devices-Tab → Add new device
  - Your phone will display a list of any Bluetooth device(s) that it discovers in range and available to be paired. Select the name of the Bluetooth enabled device (e.g. BMWxxxx) with which you are pairing and press Select. Please note that the Bluetooth enabled device name may first appear as "Handsfree".
3. Type in a passkey on the handset first (on some BMW models, the passkey that is required for this step is fixed. See the car manual for the passkey. On all other cars the passkey can be selected by the user).



4. The Confirm Passkey dialog appears on the display of the car:

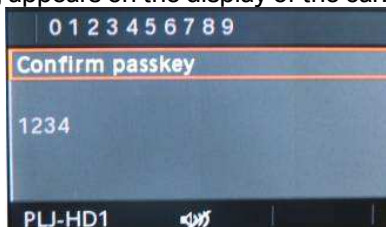

Repeat the passkey that was used on the handset to authenticate the handset and press Confirm passkey.

---

### Limitations:

#### 1. Pairing


The user will be unable to carry out the initial pairing process on subsequent occasions in the following scenario:

- Handset is deleted from the vehicle pairing menu.
- Vehicle is not deleted from the paired devices menu located in the Bluetooth menu.

Recommended Action: Please enter Bluetooth Passkey first on mobile phone. Ensure that the handset is deleted from the vehicle's pairing menu, and the vehicle (i.e. BMW34001) tag is deleted from the paired devices menu, located in the Bluetooth menu of the handset.

#### 2. Automatic Phonebook transfer

After pairing procedure the user may have to wait at about 30s for Confirm to transfer contacts Screen.

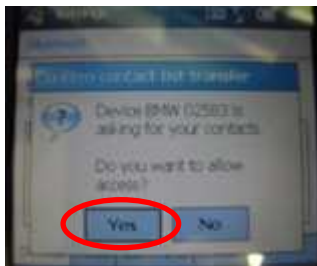

Please press Yes to allow automatic phonebook transfer after phone reconnects to car. This screen will appear once after pairing or, if it times out, after each reconnect until you answer.

#### 3. Call Waiting is not supported

#### 4. No automatic audio transfer during active call after reconnecting to car

After phone reconnects automatically to car kit during an active call (Active Call screen displayed at Headunit), user has to transfer audio manually to car kit by pressing Menu Button -> Connect Bluetooth to transferring audio back to handsfree.

Scenarios:

- User turns off Bluetooth on Headunit during an active call and on again.
- User turns off Bluetooth at handset during an active call and on again.
- User enters car with active call on handset.
- User takes handset out of Bluetooth range and re-enters the range area with an active call

#### 5. Entering Passkey at Phone

BMW cars do only accept numbers for entering the passkey. Please press and hold the white Alternative Button at your Treo for entering numbers instead of characters.



**6. Enhanced contact information**

Cars equipped with Navigation systems produced after 09/2008 are able to display enhanced contact information.