



SonyEricsson W518a

Carrier: AT&T

Software tested: R1EB009

How to find the software version: On the Home screen press **RightCursor** → * → **LeftCursor** → **LeftCursor** → * → **LeftCursor** → *, then go to **Service Info** → **Software Info**

Note: **BMW makes no guarantees or warranties as to the performance of each phone while connected to your BMW via Bluetooth® Wireless Technology. Furthermore, software releases by BMW, the phone supplier or the wireless carrier dated after testing might alter compatibility results.**

Vehicles compatible:

1 Series
3 Series
5 Series
6 Series
7 Series
X5
X6
Z4

Produced after


September 2006
September 2006
September 2006
September 2006
November 2008
October 2006
October 2006
March 2009

Pairing Instructions:

1. Set vehicle in pairing mode. For details please see the vehicle user's manual.
2.
 - To turn Bluetooth on at handset: On the Home screen press Menu → Settings → Connectivity → Bluetooth → Turn on
 - To search for Bluetooth devices: On the Home screen press Menu → Settings → Connectivity → Bluetooth → Handsfree → My Handsfree → add
 - Your phone will display a list of any Bluetooth device(s) that it discovers in range and available to be paired. Select the name of the Bluetooth enabled device (e.g. BMWxxxx) with which you are pairing and press Select. Please note that the Bluetooth enabled device name may first appear as "Handsfree".
3. Type in a passkey on the handset first (on some BMW models, the passkey that is required for this step is fixed. See the car manual for the passkey. On all other cars the passkey can



- be selected by the user).
4. The Confirm Passkey dialog appears on the display of the car:

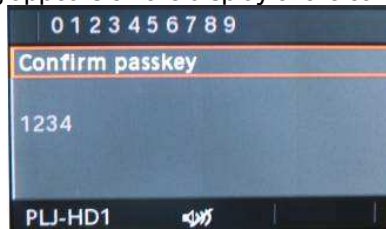

Repeat the passkey that was used on the handset to authenticate the handset and press Confirm passkey.

Limitations:

- 1. No entries from SIM card are visible in car kit**
Please copy entries from SIM card to the internal telephone directory.
- 2. No automatic audio transfer during active call after reconnecting to car kit**
After phone reconnects automatically to car kit during an active call (Active Call screen displayed at Headunit), user has to transfer audio manually to car kit by Pressing More -> Transfer Sound -> then choose your car identification (BMW xxxxx) -> Select. Call is transferred to hands free then. To come back to usual call screen on phone press OK.
Scenarios:
 - User turns off Bluetooth on Headunit during an active call and on again.
 - User turns off Bluetooth at handset during an active call and on again.
 - User enters car with active call on handset.
 - User takes handset out of Bluetooth range and re-enters the range area with an active call
- 3. Automatic reconnection to car**
If phone does not reconnect automatically, please double-check security feature of phone. Press Menu → Settings → Connectivity → Bluetooth → Handsfree → My Handsfree → your car (BMW xxxxx) → Options → Allow connection. Set to "Always allow".
- 4. Call Waiting is not completely supported**
- 5. Transfer sound screen**
With some car kits the cell phone for each outgoing call will display "Sound in headset. Transfer to phone?" Yes / no. The user can select no to make the message go away and the call will continue in handsfree mode.
- 6. Multi Party Call and Enhanced contact information**
Cars equipped with Navigation systems produced after 09/2008 are able to display enhanced contact information as well as Multi Party Call features.